Freeze-prevention heater (for drain pan) мас-644вн-е

Photo



Dimensions





Descriptions

It is freeze-prevention heater for the outdoor unit of the air conditioner.

Applicable Models

- MUZ-EF50VE
- SUZ-KA50VA6

Specifications

Rated voltage	230 V 50 Hz
Power consumption	120 W

Components

1	Defrost heater	1	5	Self drilling screw	2	
2	Heater support	1	6	Wiring diagram	1	
3	Insulation	1	0	Spec label	1	
(4)	Cable clamp	1				

How to Use / How to Install

1. INSTALLING THE HEATER

Heat exchange

- Hold the left lower side of the heat exchanger, and slightly lift up the heat exchanger.
 Insert the defrost heater ① under the heat exchanger, and align it with the groove on the base.
 - In order to fix the defrost heater to the base, fix the heater support 0 to the base with 2 self drilling screws (§).
- (3) Route the lead wires of the defrost heater ①, as shown in the figure below. Tightly secure them with the cable clamp ④.
- *If the lead wires slacken, they may touch the propeller fan. Be sure to secure the wires with the cable clamp () for safety.

2. FIXING THE WIRES (1) Install the motor support.

- (2) Tightly secure all the lead wires of the defrost heater ①, the motor, and the ambient thermistor with a clamp as shown in the figure below.
- (3) Apply the insulation on (3) the place indicated in the figure below.
- (4) Connect the lead wires of the defrost heater 1 to the inverter P.C. board (CN722).





OPTIONAL PARTS